

Contents

Important User Information	2	Fasteners	3
Safety Precautions	2	Assembly	4
Required Tools	3	Cart Use	8
Parts List	3		



Visit the Chair Move & Store Cart web page at wengercorp.com for more information.

Note: Please read and understand these instructions before proceeding.
Note: If you need additional information, contact Wenger Corporation using the information below.

Important User Information

General

Copyright © 2024 by Wenger Corporation

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, unless it is for the purchaser's personal use.

Printed and bound in the United States of America.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Wenger Corporation. Wenger Corporation does not assume any responsibility for any errors that may appear in these instructions.

In no event will Wenger Corporation be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of these instructions. The manufacturer reserves the right to change this product at any time.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when assembling or installing Wenger Corporation products. If any questions or problems arise, call the Wenger Corporation at (800) 4WENGER (493-6437) or +1-507-455-4100 worldwide.

Manufacturer

The Chair Move & Store Cart is manufactured by:

Wenger Corporation
555 Park Drive
Owatonna, MN 55060
(800) 4WENGER (493-6437) • +1 (507) 455-4100
wengercorp.com

Intended Use

- This product is designed to transport and store Wenger Playright™, Student, Musician, Cello or Nota® chairs depending on how they're assembled.
- This product is intended for indoor use in normal ambient temperature and humidity conditions – it must not be exposed to prolonged outside weather conditions.
- This product is intended to be assembled and used only as described in these instructions.

Warranty

Warranty information is available at wengercorp.com.

Safety Precautions

Throughout this document you may find cautions and warnings which are defined as follows:

- **WARNING:** Failure to follow the instruction could result in serious injury or damage to property.
- **CAUTION:** Failure to follow the instruction could result in minor injury or damage to property.

Read all of these safety instructions before using the equipment.

⚠ CAUTION

Make sure anyone assembling, installing or using this product has read and understands these instructions.

⚠ CAUTION


Failure to comply with Warnings and Cautions in this document or on the equipment can result in damage to property or injury.

Required Tools

- 1/2" Combination wrench and ratchet with 1/2" socket
- Phillips screwdriver






Parts List

Item	Qty	Description
1	1	Frame
2	1	Inside Tube
3	2	Bumper
4	4	#6 x 1/2" Drill/tap Screw
5	2	5/16-18 x 2-1/4" Capscrew
6	1	Outside Tube
7	16	5/16-18 x 5/8" Capscrew
8	2	Nonswivel Caster
9	4	5/16-18 x 1-1/2" Capscrew
10	24	5/16-18 Lock Nut
11	2	Swivel Caster
12	3	7/8" x 14" Velcro

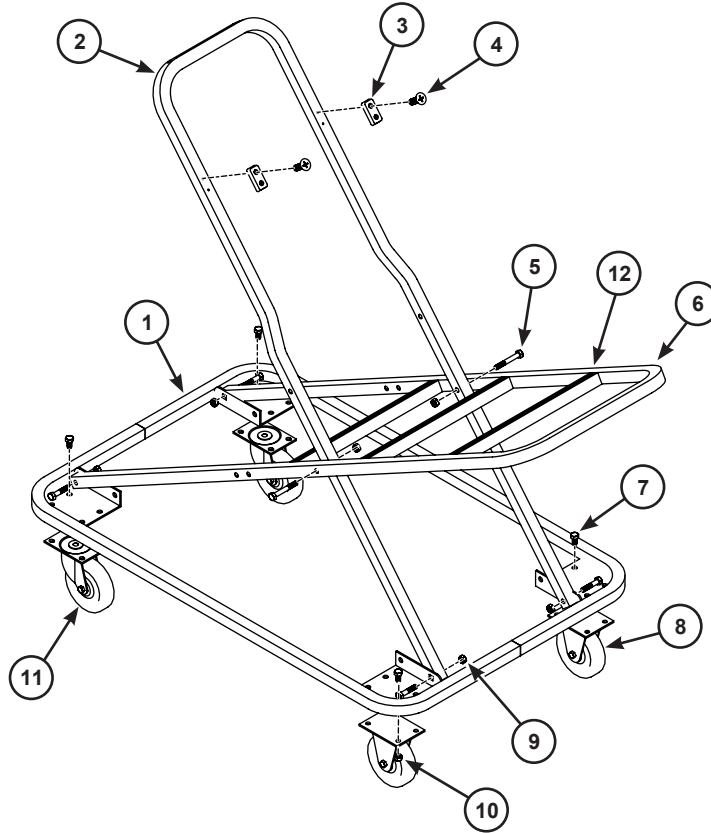


*Nota Chair configuration is shown.
Refer to the drawings on the following pages for appropriate holes to use.*

Supplied Hardware

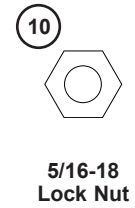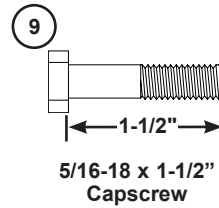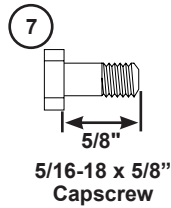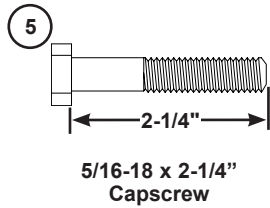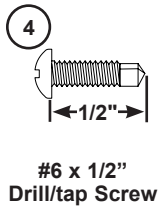

Assembly

1. Install the two swivel casters at one end of the frame using four 5/16-18 x 5/8" capscrews and four 5/16-18 lock nuts in each.
2. Install the two nonswivel casters at the other end using four 5/16-18 x 5/8" capscrews and four 5/16-18 lock nuts in each.

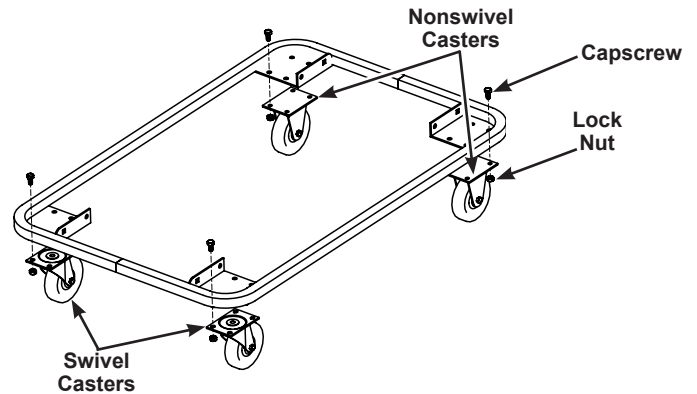


3. Attach the Inside tube to the frame.

Nota Cart:

Attach the Inside tube to the inside of the frame at the swivel caster end using two 5/16-18 x 1-1/2" capscrews and two 5/16-18 lock nuts. The capscrews are inserted from the outside of the frame, see the "Parts List" for clarification.

Be sure to use the proper holes for the Nota chair, see the illustration below.

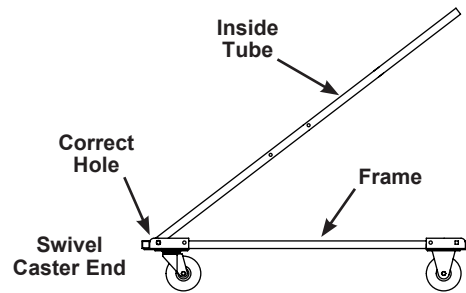


Nota Chair


All other Carts:

Attach the Inside tube to the inside of the frame at the nonswivel caster end using two 5/16-18 x 1-1/2" capscrews and two 5/16-18 lock nuts. The capscrews are inserted from the outside of the frame, see the "Parts List" for clarification.

Be sure to use the proper holes for the intended chair model, see the illustrations below.

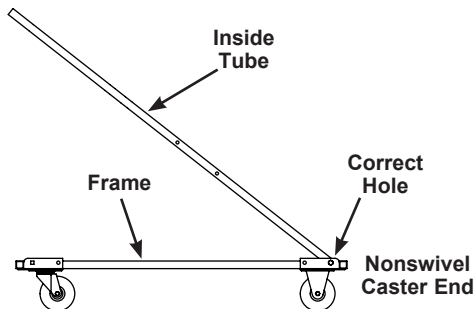

Playright, Student or Musician Chair

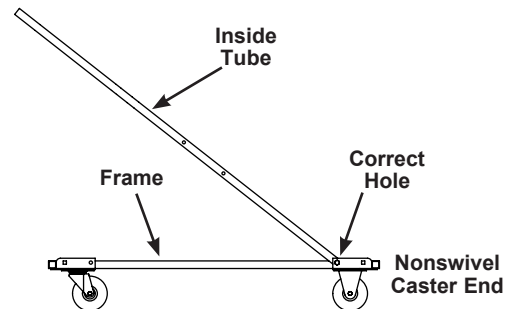

Cello Chair

NOTICE


If unsure about which chair model is being used, refer to wengercorp.com.

Assembly (continued)

4. Attach the outside tube to the frame at the other end.




Nota Cart:

With the velcro side facing up, attach the outside tube to the outside of the frame at the other end (nonswivel caster end) using two 5/16-18 x 1-1/2" capscrews and two 5/16-18 lock nuts. The capscrews are inserted from the outside of the frame, see the "Parts List" for clarification. Be sure to use the proper holes for the Nota chair, see the illustration below.

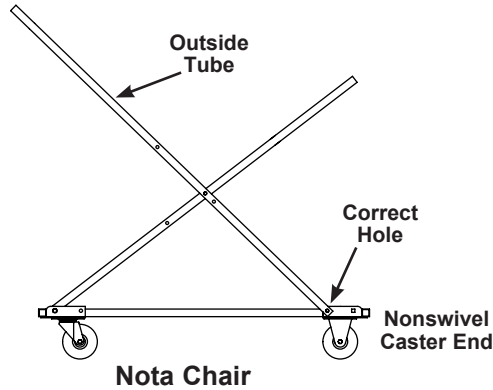





All other Carts:

With the velcro side facing up, attach the outside tube to the outside of the frame at the other end (swivel caster end) using two 5/16-18 x 1-1/2" capscrews and two 5/16-18 lock nuts. The capscrews are inserted from the outside of the frame, see the "Parts List" for clarification. Be sure to use the proper holes for the intended chair model, see the illustrations below.

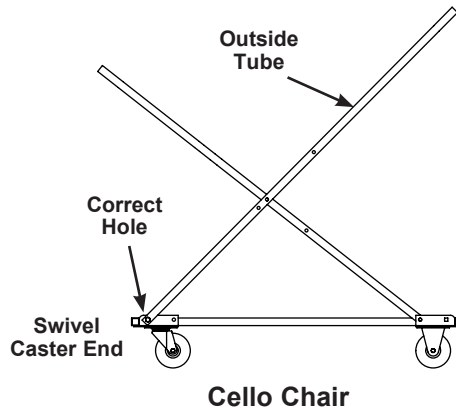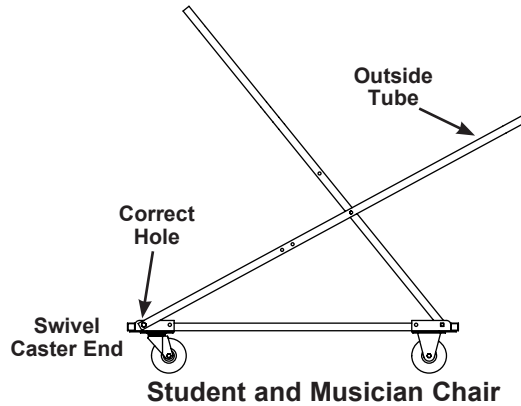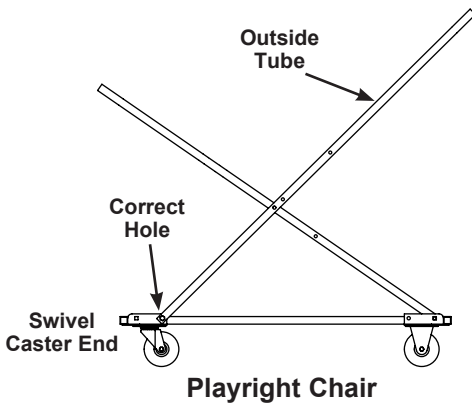


Assembly (continued)

5. Attach the inside and outside tubes together using two 2-1/4" capscrews and two 5/16-18 lock nuts. The capscrews are inserted from the outside of the frame, see the "Parts List" for clarification. Be sure to use the proper holes for the intended chair model, see the illustrations below.

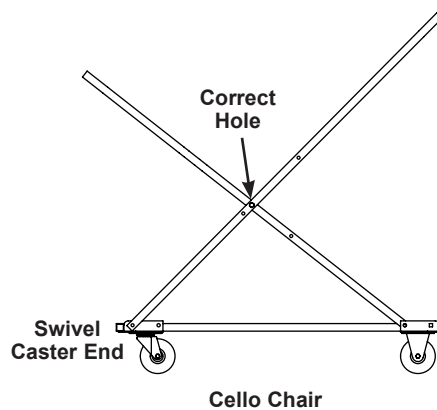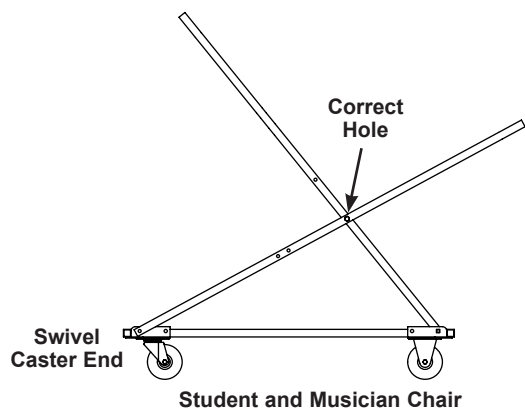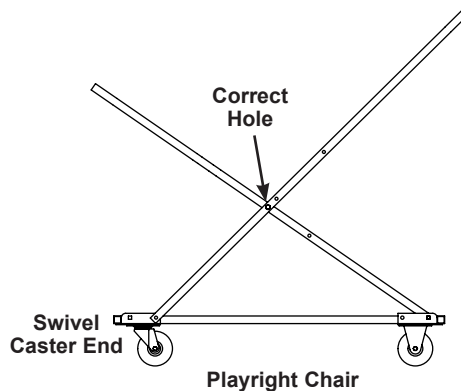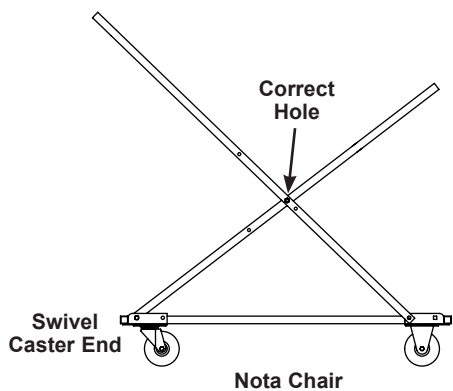

Assembly (continued)

6. Attach the two bumpers to the inside tubes using two #6 x 1/2" screws in each.

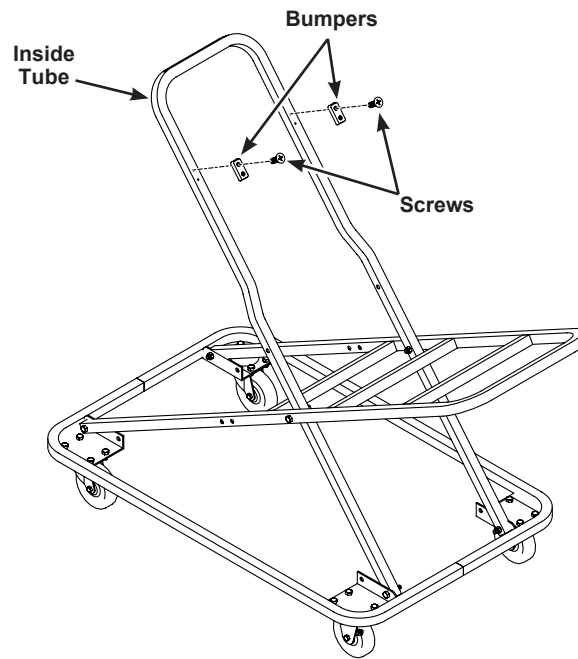

7. Be sure that all capscrews and lock nuts are tightened securely before using the Chair Move & Store Cart.

Cart Use

The following decal should be located on the top side of one of the casters. It shows the recommended quantities and positions for chairs on the cart.

